EXTRACARE TOILET SUITE

Before you install.

INSTALLER	Must be installed by a licensed plumber, who supplies an installation certificate that includes their identification.
STANDARDS	Install in accordance with the AS/NZS 3500 series of Standards and any local regulations.
MEASUREMENTS	Take all roughing-in measurements from the finished wall and floor.
CHECK THE SUITE	Check the suite for faults, including cracks, before installing.
SEAT AND COVER	Install the seat and cover after all trades are finished.

S TRAP	P TRAP HEIGHT	P TRAP PROJECTION
220-320mm	180mm	260mm

CARE AND CLEANING

CLEANING	Wipe over with mild soapy water. Rinse with clean water and polish with a clean soft cloth.
DO NOT USE	Abrasive materials such as steel wool or scourers, or abrasive or corrosive cleaning agents containing acids or scouring agents. These may damage the surface.
BLEACH	Bleach can discolour seats and hinges and should not be used.
METAL HINGES	If the toilet has metal hinges, clean only with a mild liquid domestic cleaner and soft soapsuds, or a steel and chrome cleaner.

FAILURE TO FOLLOW THE INSTALLATION INSTRUCTIONS WILL VOID THE WARRANTY

ADDRESS
42 Castro Way, Derrimut VIC 3026

PHONE
(03) 8390 6300

EMAIL
sales@zenmo.com.au


WEBSITE
www.zenmo.com.au

EXTRACARE TOILET SUITE

Roughing in.


STEP 01 ALL TRAPS

Rough in the position of the water inlet, waste outlet and floor fixing bracket holes. Make sure the inlet connection extends 60mm from the finished wall. Drill holes for the floor fixing brackets, then fix the brackets to the floor.

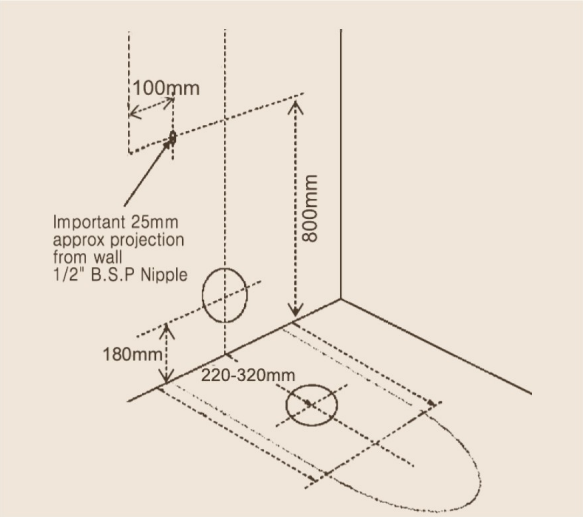


STEP 02 S TRAP

Lubricate the fins of the pan bend and position it into the waste pipe. If the pipe needs cutting, cut it to the right proportion according to the ring, and clean the trap after cutting. Offcuts left in the trap may cause leaking.

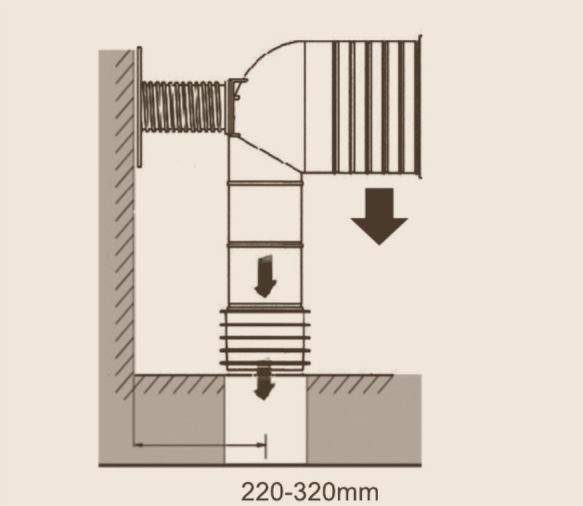

STEP 03 S TRAP

Lubricate the rubber on the exposed connector end.

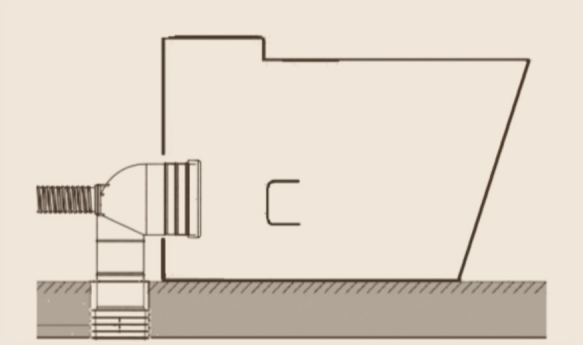

ADDRESS
42 Castro Way, Derrimut VIC 3026

PHONE
(03) 8390 6300

EMAIL
sales@zenmo.com.au


WEBSITE
www.zenmo.com.au

EXTRACARE TOILET SUITE

Fitting the pan.


STEP 04 S TRAP

Align the fully assembled toilet and push it back to the wall. The pan must fit a minimum of 50mm onto the spigot.

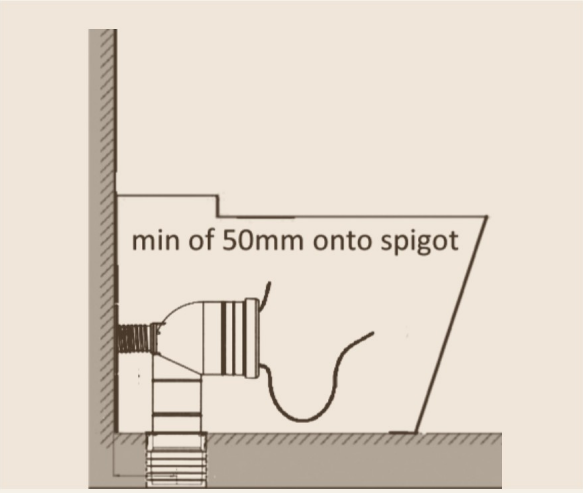


STEP 05 P TRAP

Set up the waste pipe so that the end of the pan collar extends 260mm from the finished wall. The pan collar centre is 180mm above the floor.

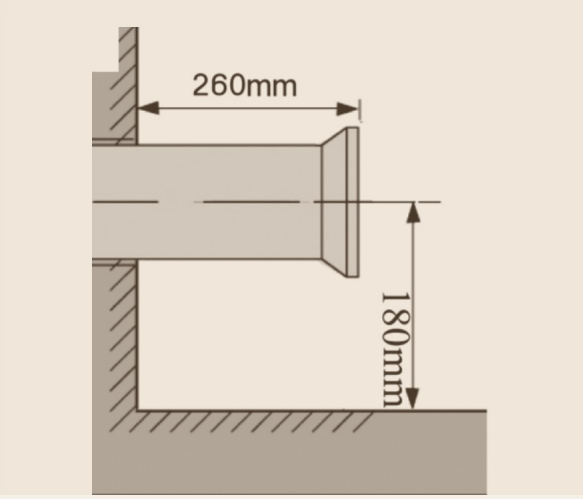

STEP 06 P TRAP

Align the fully assembled toilet and push it back to the wall, connecting the pan spigot to the pan collar. Pour a bucket of water through to flush and check for leaks. Because of the design, weight and stability of the pan and cistern, a silicone adhesive only is recommended for floor based fixing.

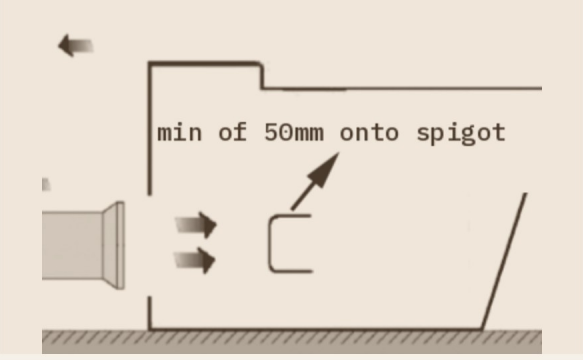

ADDRESS
42 Castro Way, Derrimut VIC 3026

PHONE
(03) 8390 6300

EMAIL
sales@zenmo.com.au

WEBSITE
www.zenmo.com.au

EXTRACARE TOILET SUITE

Installing the cistern.


STEP 07 CISTERN

Before installing the cistern, check that the bungs and valves are tightened correctly. Put a bead of silicone on the upper and lower surfaces of the foam rubber seal between the cistern and the pan. Place the rubber seal at the bottom of the cistern, then gently lower the cistern onto the pan. Make sure the screw holes match between the cistern and the pan. Apply a bead of silicone around the bolts, then secure the cistern to the pan. Before tightening fully, make sure the cistern sits square and straight on the pan.




STEP 08 BOTTOM INLET

If you are using a back inlet, skip this step. For a bottom (left hand) inlet connection, connect the flexible hose to plastic tube A, then complete the stop tap connection to the underside of the cistern at plug C. Fill the cistern and check the water level is correct. The inlet valve can be adjusted if required.

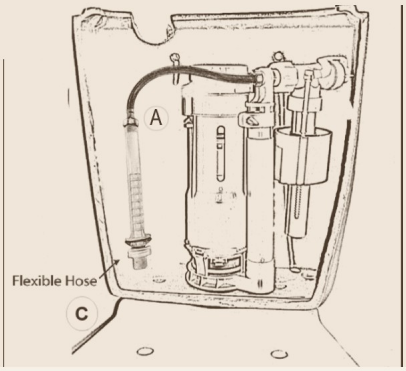

STEP 09 BACK INLET

If you completed step 8, skip this step. Fit off the stop tap, then connect the rear water inlet valve to the stop tap. Fill the cistern and check the water level is correct. Make sure the inlet valve flow is free from the side of the cistern wall. If the inlet valve jams on the cistern wall, it will cause the inlet valve to keep filling.

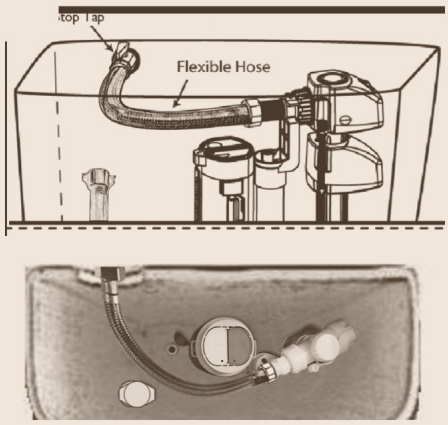

ADDRESS
42 Castro Way, Derrimut VIC 3026

PHONE
(03) 8390 6300

EMAIL
sales@zenmo.com.au

WEBSITE
www.zenmo.com.au