AUTOMATIC HAND DRYER, TP HDRY AND TP HDRY MK

Before you install.


REMINDERS BEFORE YOU START

01	Install the dryer on a wall that is not easily vibrated.
02	Do not knock the dryer against hard objects or scratch it, which affects its appearance.
03	Do not wash the dryer directly. Do not wipe the shell with banana water (thinner), alcohol or other corrosive liquids.
04	If the enclosure is dirty, switch off the power and wash the case with a wet towel and soapy water.
05	If the power cord is damaged, it must be replaced by professional personnel of the manufacturer's maintenance department or a similar department, to avoid danger.

PRODUCT PARAMETERS

VOLTAGE 220 to 240V	FREQUENCY 50/60Hz
POWER 1500W	HEATING MODE Electric heating wire
INDUCTION DISTANCE 12 ± 3cm	DRY HAND TIME 7 to 10 seconds
INSTALLATION Wall mount	DIMENSIONS 390 x 235 x 144mm

DIMENSIONS, MM

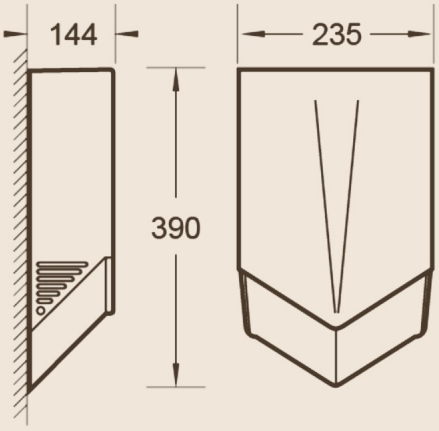

FAILURE TO FOLLOW THE INSTALLATION INSTRUCTIONS VOIDS THE WARRANTY

ADDRESS
42 Castro Way, Derrimut VIC 3026

PHONE
(03) 8390 6300


EMAIL
sales@zenmo.com.au

WEBSITE
www.zenmo.com.au

AUTOMATIC HAND DRYER, TP HDRY AND TP HDRY MK

Installing the dryer.

STEP 01

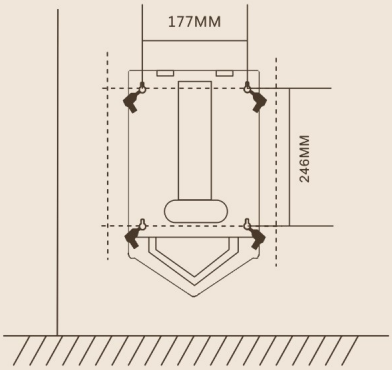


Fix the base.

Fix the base on the wall, using the installation holes as shown.

HOLE SPACING ACROSS	HOLE SPACING DOWN
177mm	246mm


STEP 02

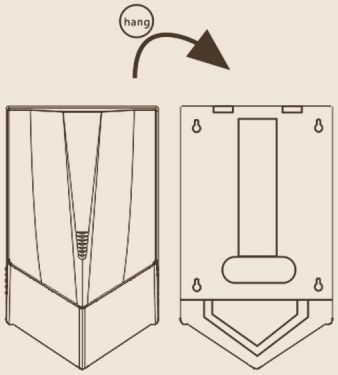

Hang the dryer.

Hang the dryer on the base.

STEP 03

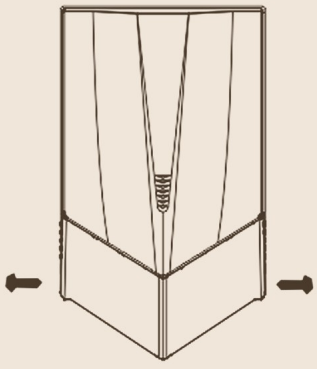

Fix the screws.

Screw in the left and right screws to complete the installation.

ADDRESS
42 Castro Way, Derrimut VIC 3026

PHONE
(03) 8390 6300

EMAIL
sales@zenmo.com.au

WEBSITE
www.zenmo.com.au


AUTOMATIC HAND DRYER, TP HDRY AND TP HDRY MK

Using the dryer.


HOW IT WORKS

01	Make sure the power supply is normal before using the dryer.
02	The sensor distance is 12 ± 3cm.
03	After about 60 seconds of continuous work, the dryer stops working.

USAGE

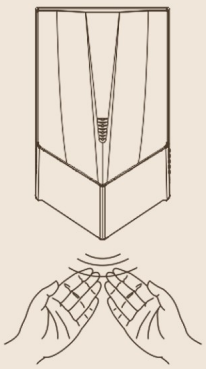


Hands placed within the sensor distance of the sensor window. The dryer works automatically.

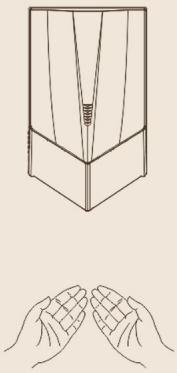

Hands leave the sensor area. The dryer stops automatically.

PARTS

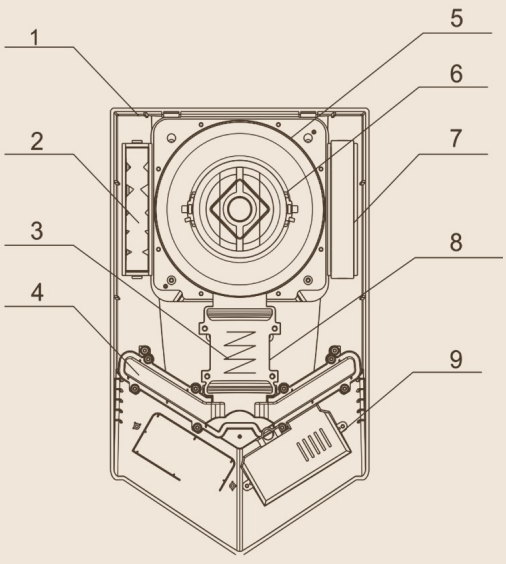

01	Shell
02	Air filter
03	Heater
04	Air spout
05	Motor frame
06	Motor
07	Air inlet
08	Heater box
09	PCB

Filter nets need to be replaced regularly.

ADDRESS
42 Castro Way, Derrimut VIC 3026

PHONE
(03) 8390 6300

EMAIL
sales@zenmo.com.au

WEBSITE
www.zenmo.com.au