

INSTALLATION INSTRUCTIONS

Code: UR02


DESCRIPTION

The Prince Urinal is a vitreous china wall hung urinal with back water entry and a waste trap that is concealed within the unit.

The urinal is designed to be used with a sensor activated, timed solenoid system.

The product is compatible with ZENMO Smart-demand Sensor Flush Device - **URSES01** (see separate instructions for the electronic component installation).

A pair of wall mounting brackets and a flexible hose are supplied. A top-locking stainless steel waste dome and a waste pipe are included.

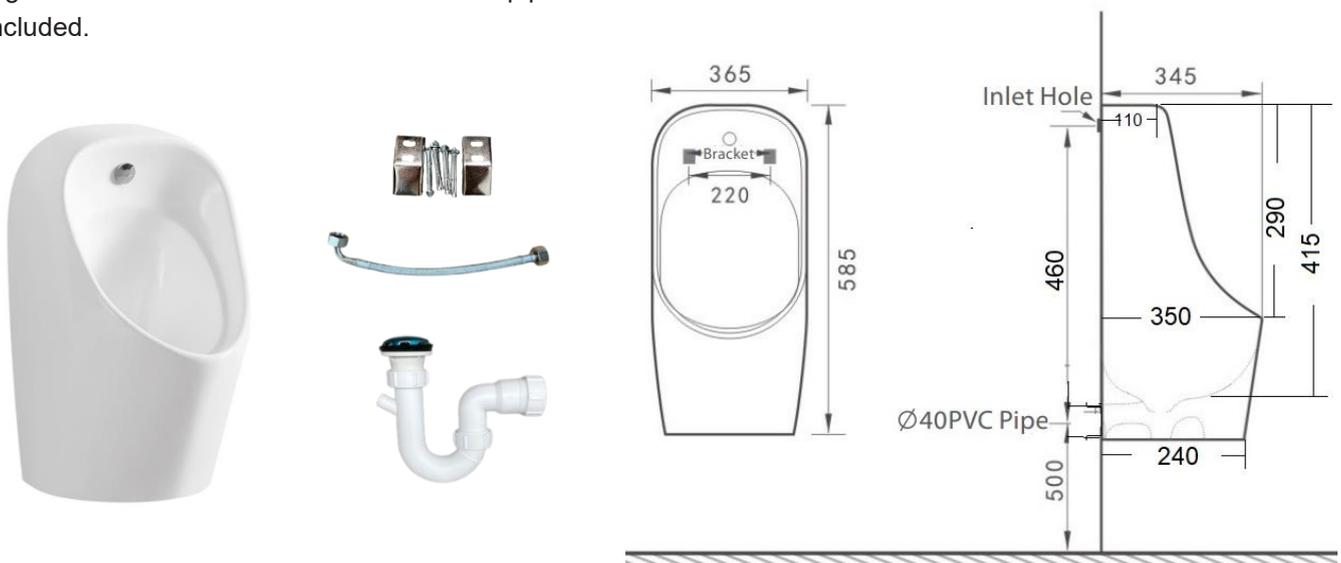

INSTALLATION STEPS

1. Inspect urinal for any transit damage before commencing installation.
2. Check site roughing in and installation dimensions before starting. Make sure there is a stud on the wall to secure the urinal. The distance between two fixing points is **220mm**.
3. Check and measure the water inlet/waste outlet and bracket locations to confirm installation fit. The distance between the water inlet and waste outlet is **460mm**.
4. Install two mounting brackets with the screws supplied. Connect the flexible hose with water inlet.
5. Install the stainless-steel waste into urinal. Connect the waste to 40mm PVC waste pipe (supplied).
6. Fix the plastic waste trap to the wall in the correct location.
7. Mount the urinal on the brackets, making sure that the water inlet and waste outlet seal correctly (lubricant may be used).
8. Test flush to check operation and for leaks (Note: water supply piping should be flushed prior to operation test).
9. Apply silicone sealant around the perimeter to seal the urinal to the wall if required.

All installations must be carried out by a licensed plumber in compliance with the Plumbing Code of Australia and any State or LGA Regulations

All dimensions are in millimeters and are subject to normal manufacturing variation of +/- 5mm on all surfaces.

As product development is ongoing BPA reserves the right to vary specifications without notice.