

**HEAD OFFICE:**

42 Castro Way.

Derrimut Vic 3026

ABN: 70 095 343 123

Tel: 03 8390 6300 Fax: 03 8390 6366

EMAIL: [ect\\_sales@outlook.com](mailto:ect_sales@outlook.com)Website: [www.zenmo.com.au](http://www.zenmo.com.au)


## ***WALL HUNG BASIN INSTALLATION INSTRUCTIONS***

### **Important Information**

- Prior to Installation it is important to inspect your basin to ensure no damage has occurred in transit. If damage has occurred, or a visible defect exists, do not proceed with installation & advise your supplier immediately.
- ECT or your supplier will not be liable for the cost of installation or removal of your basin, and warranty will be voided if damage has occurred during or after installation.
- It is recommended that a licensed tradesperson install the basin.
- Suitable reinforcement must be provided behind finished wall for the attachment of basin. For timber stud walls, noggins and studs must be positioned at a height to allow for the location for fasteners.

### **Installation without shroud**

1. Mark fixing screw hole position on finished wall at the recommended height approx. 825mm.
2. Drill two holes on the wall for fixing screws.
3. Insert fixing screws into the drilled holes, allow 55mm of thread to protrude from the finished wall.

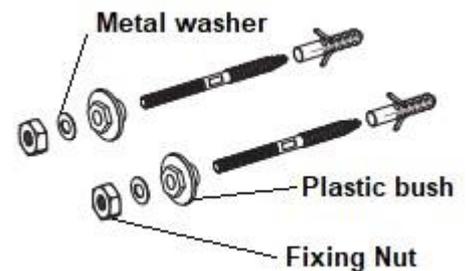

4. Locate basin onto the fixing screws on the wall. Insert plastic bushes, metal washers and fasten to wall with fixing nut.
5. A hard plastic wedge is recommended for levelling adjustment if required.



### **Shroud Installation**

1. Ensure basin is secured to bracket and plumbing is connected.
2. Position shroud to underside of basin. Mark fixing screw hole position on finished wall.
3. Drill two holes on the wall for fixing screws.
4. Insert fixing screws into the drilled holes, allow 55mm of thread to protrude from the finished wall.
5. Locate shroud onto the fixing screws on the wall. Insert plastic bushes, metal washers and fasten to wall with fixing nut.