


INSTALLATION INSTRUCTION

Free Standing Bath Mixer (WT 740)

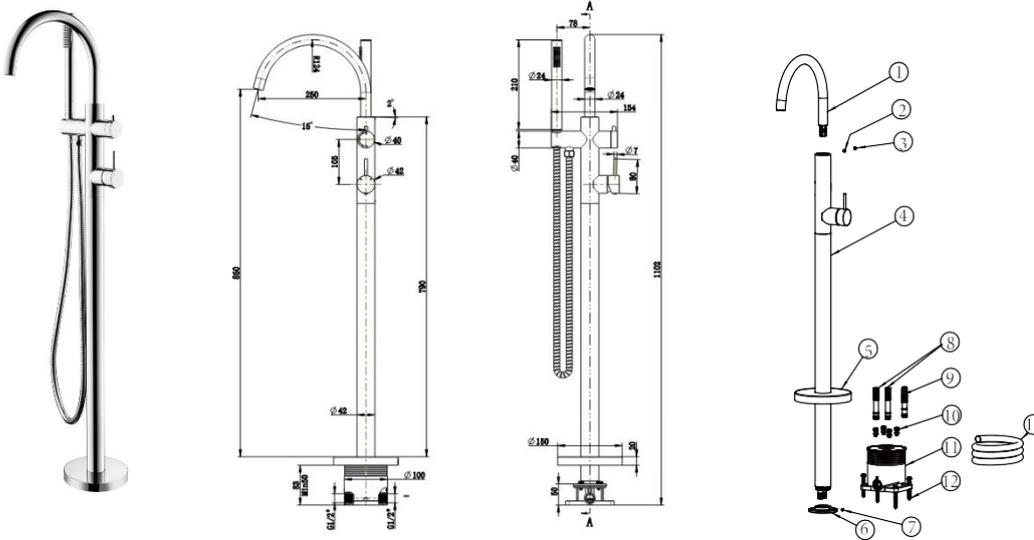

1	Spout
2	Grub screw
3	Grub screw cover
4	Spout body
5	Base plate cover
6	Base plate
7	Grub screw
8	Water plug
9	Water outlet plug
10	Screws
11	Mounting Body
12	Mounting screws
13	Flushing pipe

General information

1. Prior to installing a tap, all pipes leading to the product must be flushed clean.
2. Products are manufactured as per standard AS/NZS 3718:2021 and with WaterMark & WELS certificate as shown in the packing.
3. All surfaces should be cleaned with water or mild liquid detergent. Do not use cream cleaner or citrus based or chemical cleaning products.



recommended
working pressure
**0.05–0.8
MPa**




maximum hot
water temperature
**55
degrees**

Installation


Step 1

1. Install mounting body
2. Ensure levels are correct

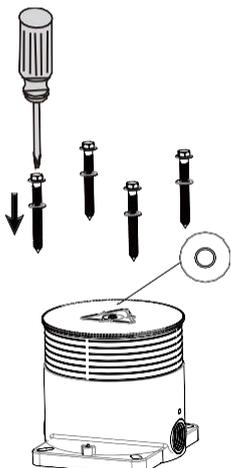


Step 2

1. Install water plugs
2. Connect hot and cold water pipes
3. Pressure test unit

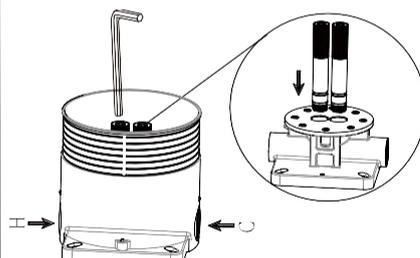


Step 3

1. Using water discharge plugs and a hose to flush the pipes before fit off
2. Once you are satisfied that the pipes are clean remove water discharge plugs and you are ready to connect the hot and cold hoses

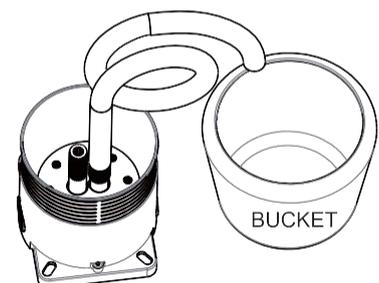


Step 4

1. Install spout body and mount spout. Ensure the fixed hole is aligned with main thread hole
2. Fix in grub screw and cover with grub screw

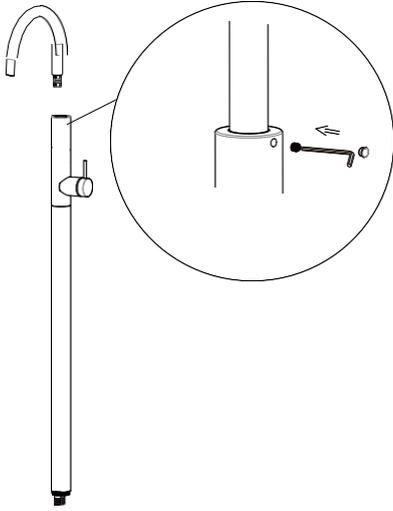


Step 5

1. Slide the cosmetic base plate cover from the bottom.

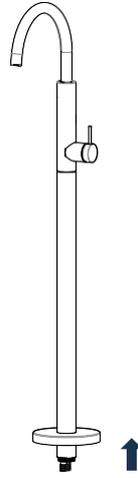


Step 6

1. Lubricate the O-rings on the H & C hoses before installation
2. Screw in grub screw

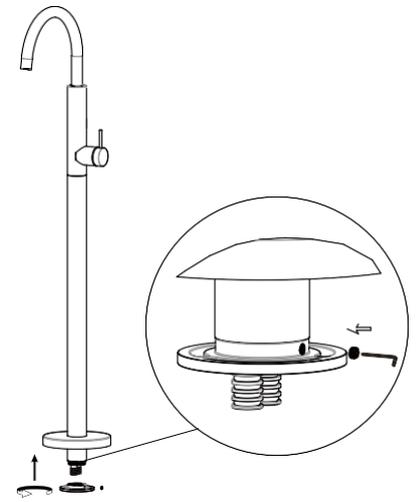

Step 7

1. Lubricate O-rings on the H&C hoses to avoid damage
2. Fix in the screws and position base plate.

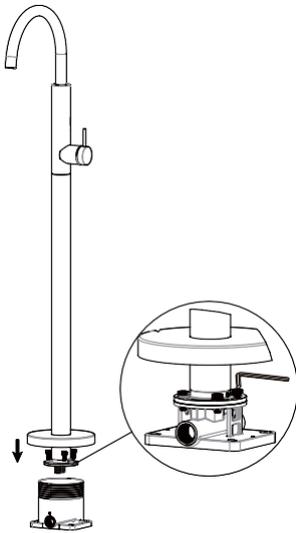

Step 8

1. Connect flexible hose to the mixer body.
2. Connect the hand-held spray head to the hose. Ensure the black rubber seal is inserted in between.

