
TOP MOUNTED STAINLESS STEEL SINKS

Installation guide.


STEP 01

Use the cut-out template provided to make the cut-out line on the bench top.

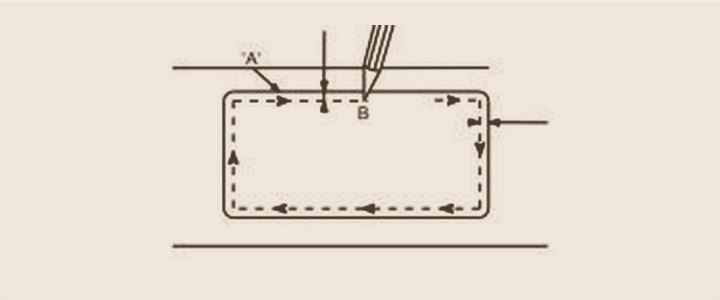


STEP 02

Cut the bench top along the line you marked. Seal the cut surfaces.

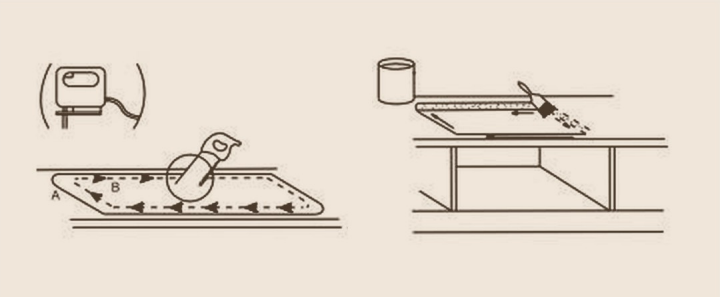


STEP 03

Fit the gasket to the back of the sink, ensuring double thickness at the corners. Push the clips onto the rail.

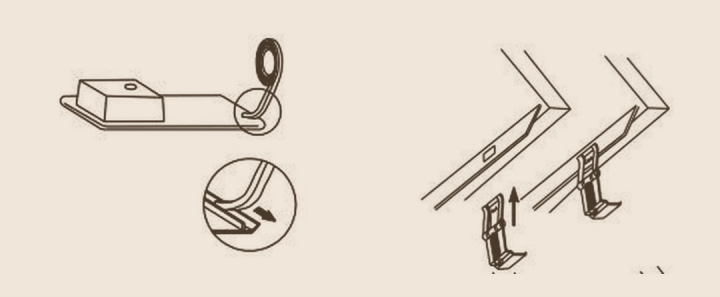

STEP 04

Rotate the claw under the bench top. Use a Phillips head screwdriver to tighten all clips in the order shown.

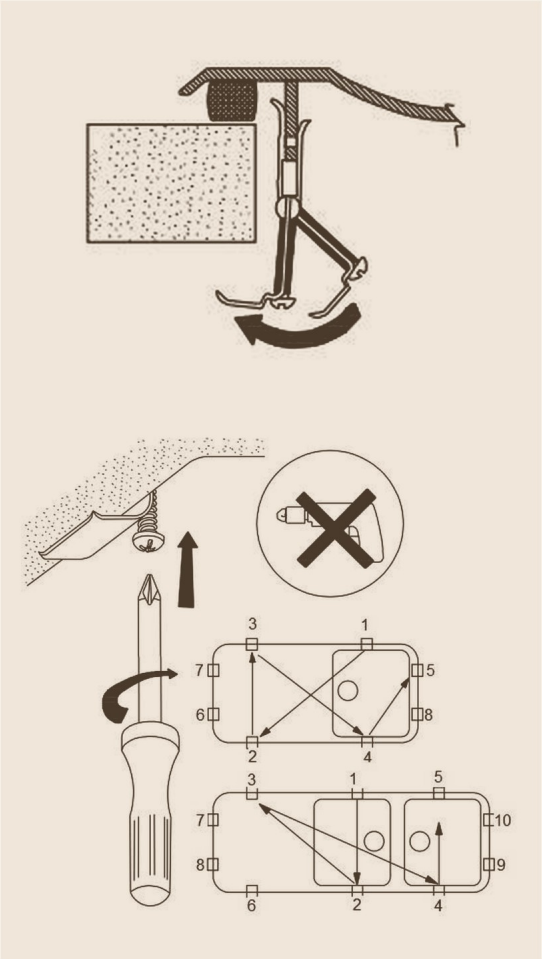

ADDRESS
42 Castro Way, Derrimut VIC 3026

PHONE
(03) 8390 6300

EMAIL
sales@zenmo.com.au

WEBSITE
www.zenmo.com.au