

OUTDOOR FREE STANDING TWIN SHOWER SET, WT 8053

Installation guide.

DIMENSIONS, MM

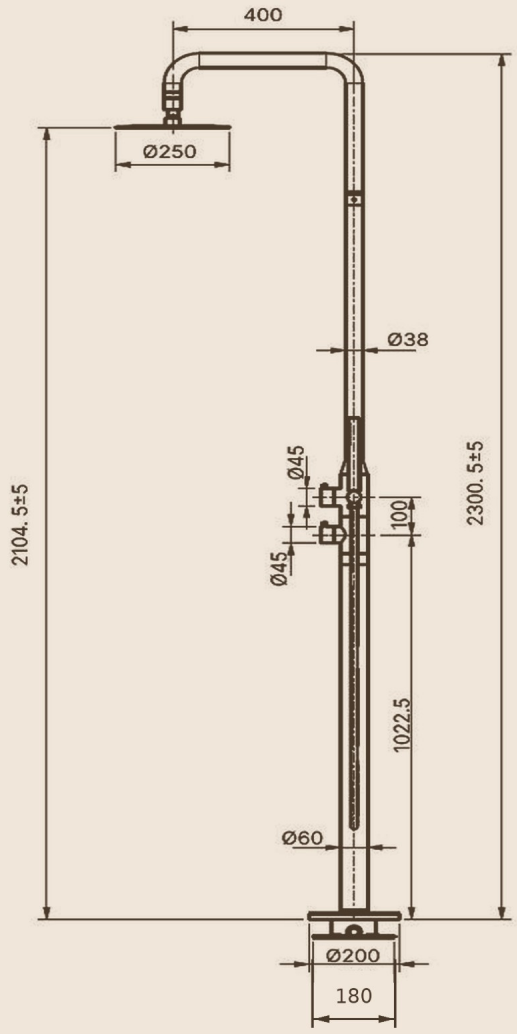

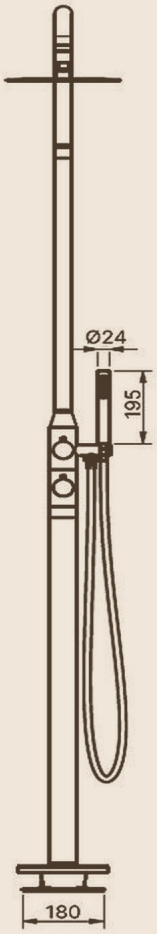

HEIGHT
2300mm

BASE PLATE
180 x 180mm

FIXING DEPTH
60mm

FIXINGS
6 dyna bolts

INSTALLATION CONDITIONS

Water pressure: 150kPa to 500kPa
Hot and cold pressure must be equal
Water temperature: 75°C maximum

BEFORE YOU START

Check all parts against the parts picture on the next page.
Contact Zenmo if any parts are missing or damaged.
Installation by a licensed plumber is required for warranty.

ADDRESS
42 Castro Way, Derrimut VIC 3026

PHONE
(03) 8390 6300


EMAIL
sales@zenmo.com.au

WEBSITE
www.zenmo.com.au

OUTDOOR FREE STANDING TWIN SHOWER SET, WT 8053

Parts and methods.

PARTS, 1 TO 12

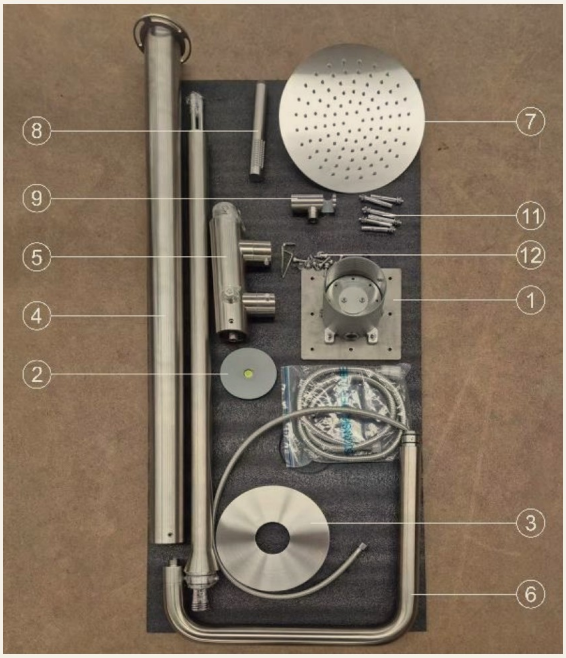


01	Base
02	Lid
03	Cover plate
04	Body and mounting plate
05	Diverter and switch
06	Shower arm
07	Shower head
08	Hand-held shower head
09	Glider
10	Flexible hose
11	90mm dyna bolt x6, screws x8
12	20mm bolt x8, Allen key x2

IMPORTANT


Do not install the shower set encased in concrete. Access to the water connections must be kept. The warranty is void if the product is installed incorrectly or encased in concrete. Consult a designer or plumber before installing.

THREE CORRECT INSTALLATION METHODS

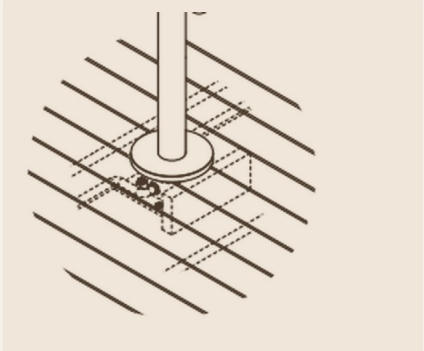


01

Concrete slab with timber decking

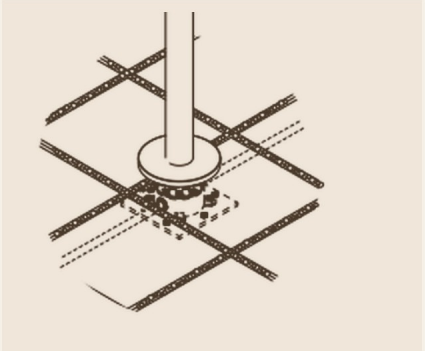

02

Concrete slab with fine stone fill, decorative stone and removable paving

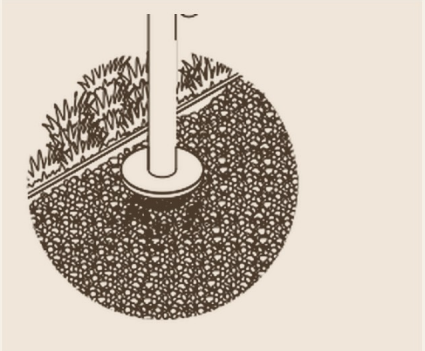

03

Concrete slab with fine stone fill and decorative stones

ADDRESS
42 Castro Way, Derrimut VIC 3026

PHONE
(03) 8390 6300

EMAIL
sales@zenmo.com.au


WEBSITE
www.zenmo.com.au

OUTDOOR FREE STANDING TWIN SHOWER SET, WT 8053

Steps 1 to 4.


STEP 01

Use the base as a template to mark the drilling holes. Place the lid on top to check the level and double check the position.

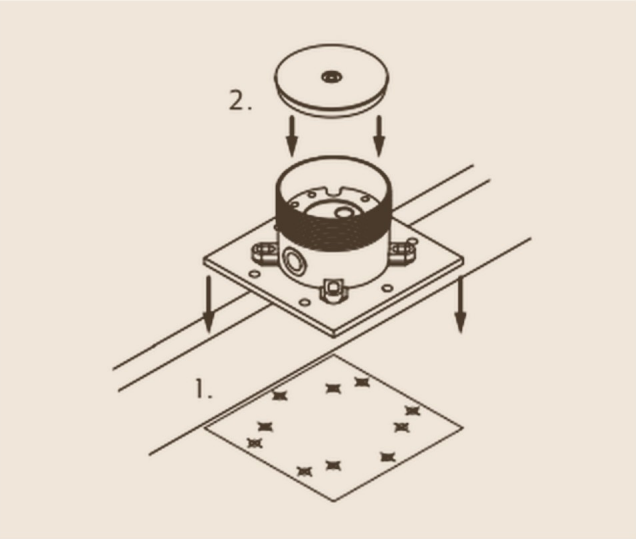


STEP 02

Remove the base. Drill holes into the concrete footing to a depth of 60mm and insert the dyna bolts.

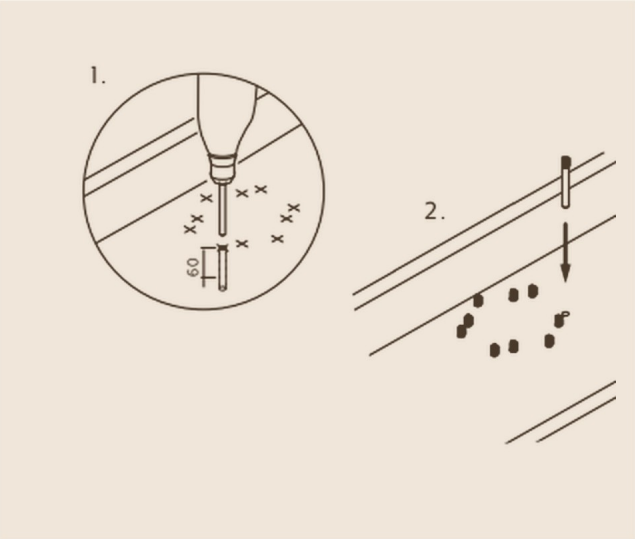


STEP 03

Tighten the nuts to secure the base down. Attach the hot and cold water pipes, using appropriate thread sealant.

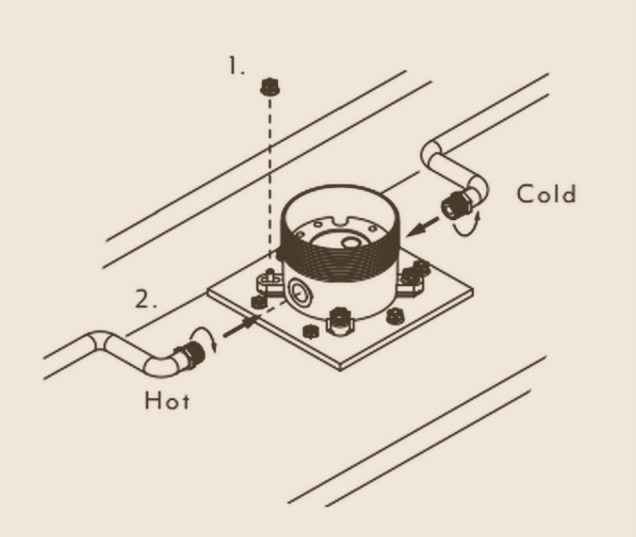

STEP 04

Trim the plastic housing level with the floor structure, if required. Secure the water pipes appropriately.

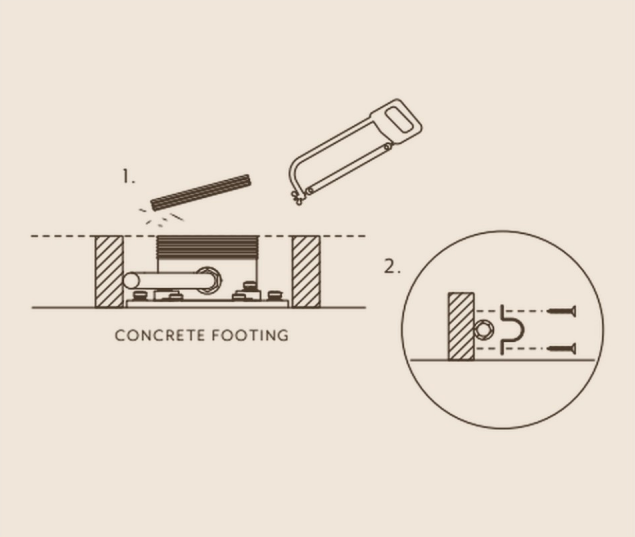

ADDRESS
42 Castro Way, Derrimut VIC 3026

PHONE
(03) 8390 6300

EMAIL
sales@zenmo.com.au


WEBSITE
www.zenmo.com.au

OUTDOOR FREE STANDING TWIN SHOWER SET, WT 8053

Steps 5 and 6.


STEP 05

Put the cover plate on the body, sliding it on from the bottom. Screw the mounting plate underneath. Attach the body to the base and fasten with bolts.

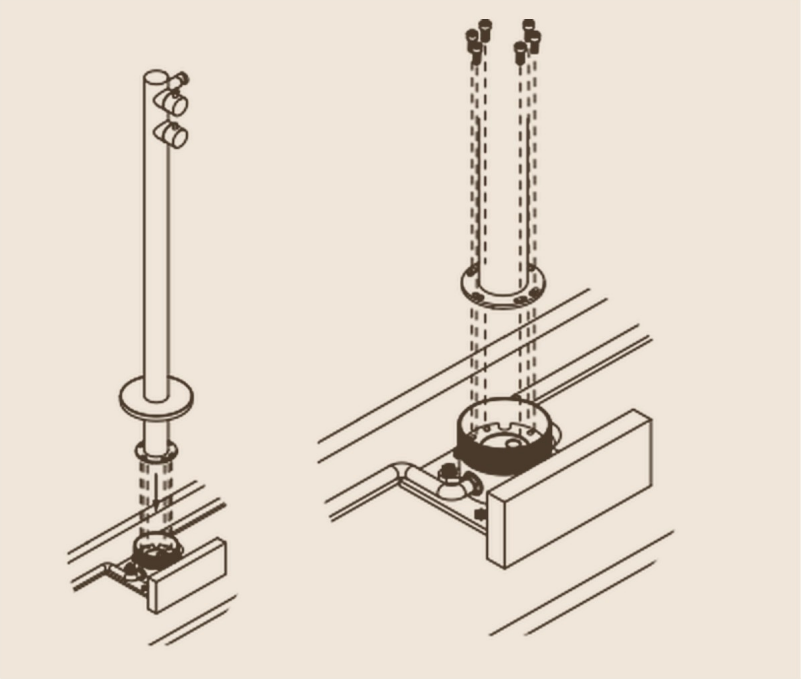

STEP 06

Connect the shower head to the arm.

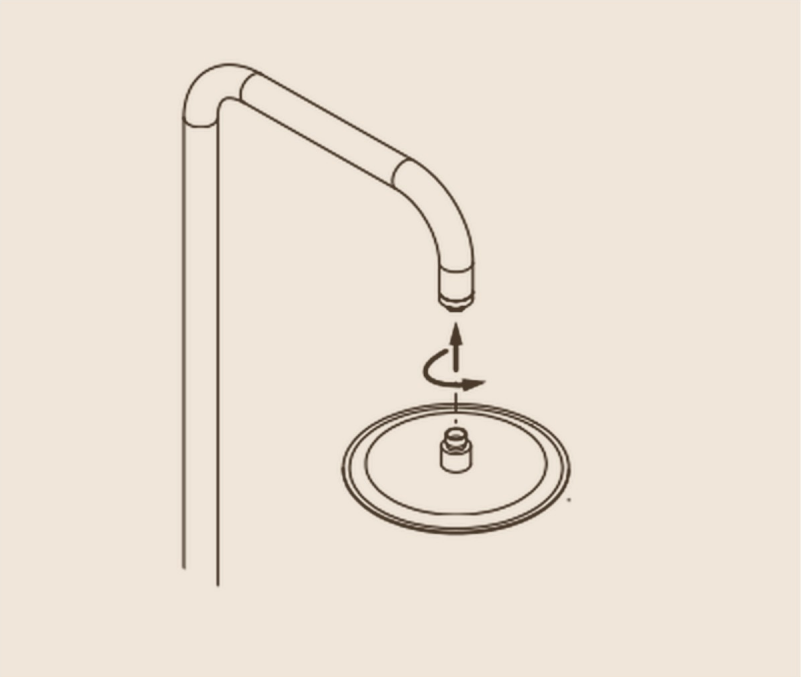

ADDRESS
42 Castro Way, Derrimut VIC 3026

PHONE
(03) 8390 6300

EMAIL
sales@zenmo.com.au


WEBSITE
www.zenmo.com.au

OUTDOOR FREE STANDING TWIN SHOWER SET, WT 8053

Steps 7 and 8.


STEP 07

Connect the arm to the body. First connect the internal flexi-hoses. Then push together and use the Allen key to fasten the set screw. Test and check all water points for leaks.

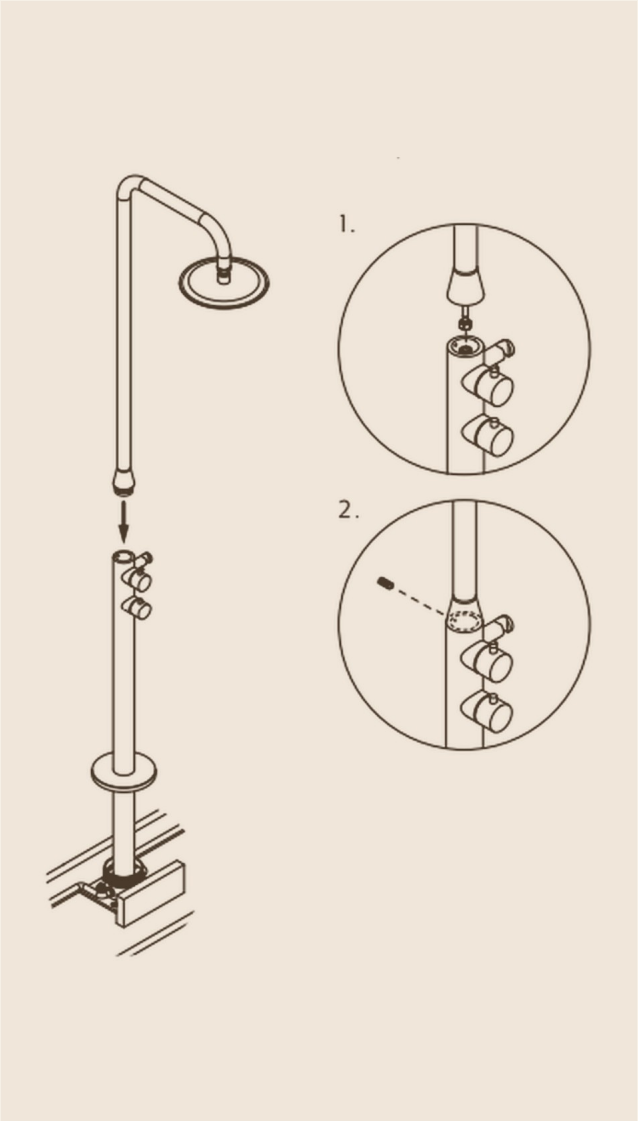

STEP 08

Attach the floor covering. Push the cover plate down.

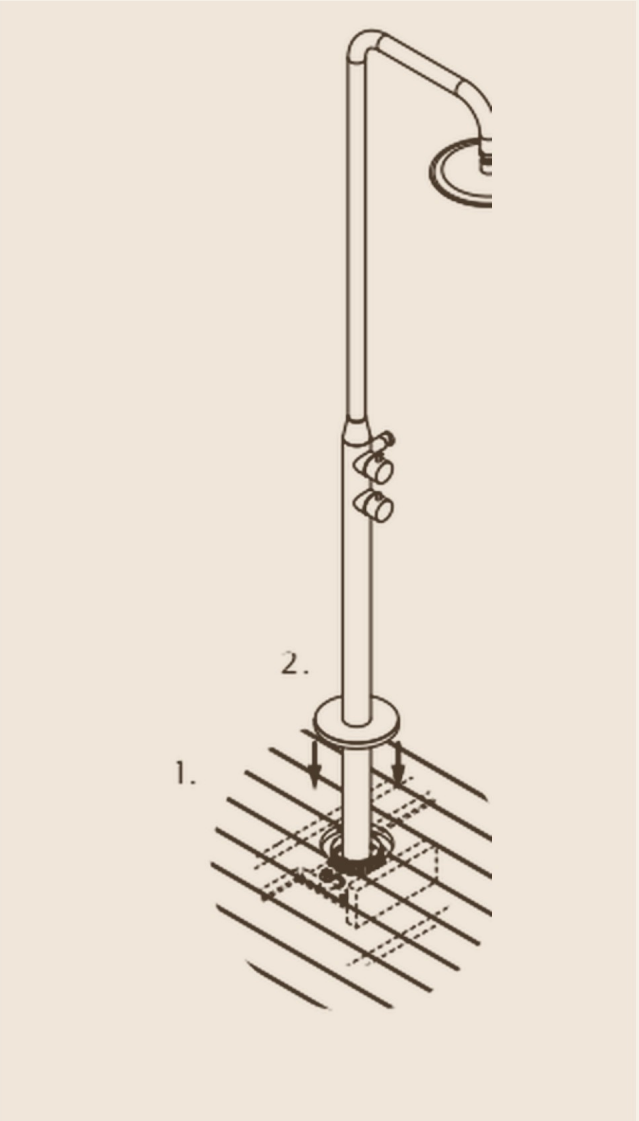


OUTDOOR FREE STANDING TWIN SHOWER SET, WT 8053

Final step.


STEP 09

Attach the hand-held shower head. Test and commission the shower.

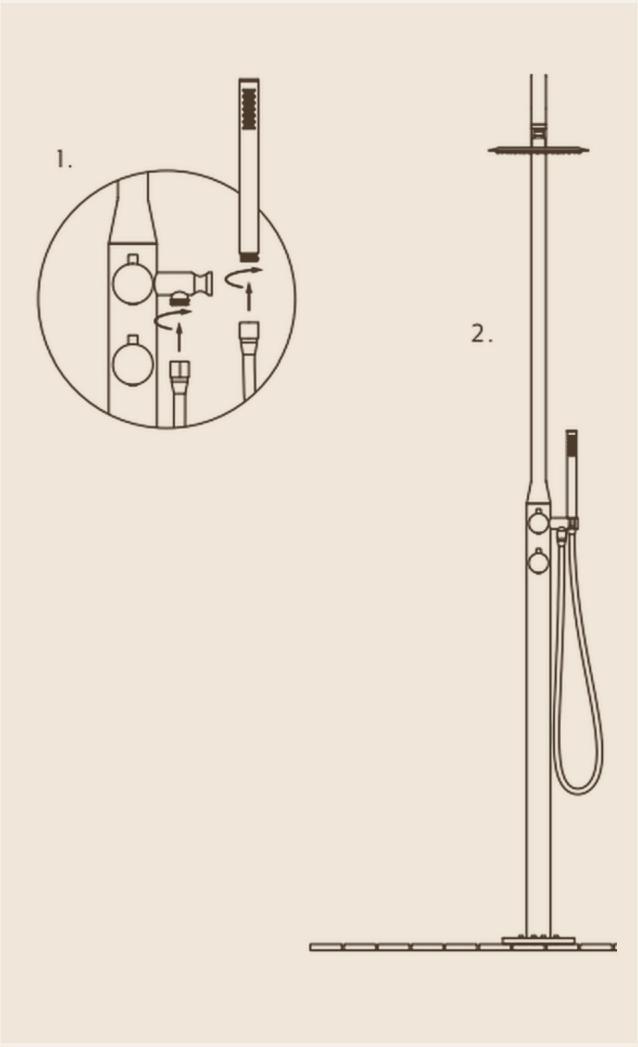

BASE CONNECTION

Base plate dimensions and fixing positions, top view, front view and side view.

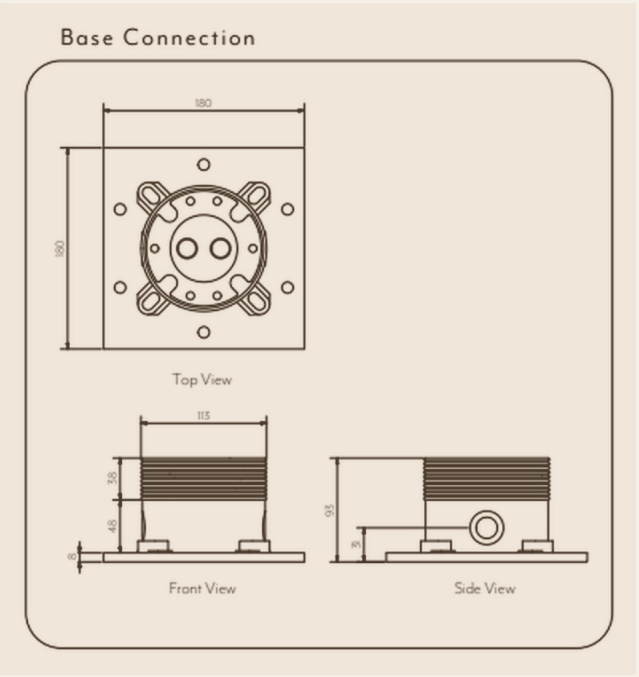

NEED HELP

Contact Zenmo on (03) 8390 6300 or sales@zenmo.com.au if you need help with installation or have a warranty query.

ADDRESS
42 Castro Way, Derrimut VIC 3026

PHONE
(03) 8390 6300

EMAIL
sales@zenmo.com.au

WEBSITE
www.zenmo.com.au