MOBI CARE SHOWER MIXER, WT 509D

Before you install.

Read this page before you begin. Failure to comply with any of the requirements below will void all warranties.

MAX PRESSURE	MAX HOT WATER	HOT INLET	COLD INLET
500kPa	80°C	Left, marked H	Right, marked C

INSTALLER	The mixer must be installed by a qualified plumber. Keep a certificate of compliance with the installer's details and the receipt of purchase for any warranty claim.
BEFORE INSTALLING	Flush all pipework thoroughly. Fit isolating stop taps to both the hot and cold supplies in accordance with AS3500.
WATER PRESSURE	Hot and cold inlet pressures should be equal. The maximum operating pressure at any outlet is 500kPa. Fit an approved pressure reducing valve if the supply is higher.
WATER TEMPERATURE	The maximum hot water temperature is 80°C. Fit an approved water tempering valve if the supply is hotter.
CONNECTIONS	Facing the mixer, the hot water inlet H is on the left and the cold water inlet C is on the right. The mixed water outlet points vertically upwards.
PROTECTING THE FINISH	Do not remove the plastic sleeve until installation is complete, to avoid damaging the decorative finish.

FAILURE TO COMPLY WITH ANY OF THE ABOVE WILL VOID ALL WARRANTIES

ADDRESS
42 Castro Way, Derrimut VIC 3026

PHONE
(03) 8390 6300

EMAIL
sales@zenmo.com.au

WEBSITE
www.zenmo.com.au

MOBI CARE SHOWER MIXER, WT 509D


Installing the mixer.

01	Fix the mixer body onto a suitable mounting plate or noggin in the wall. Secure it with screws through the holes in its base.
02	Check the connections. Facing the mixer, hot water inlet H is on the left, cold water inlet C is on the right and the mixed water outlet is vertically upwards. Check all connections for leaks.
03	Install the mixer body square to the wall or tile face so that the cover plate sits flush.
04	Fit the cover plate onto the mixer body after the tile is on. Make sure the plate sits flush.
05	Use an Allen key to loosen the grub screw in the handle and fit the handle on the mixer body. Tighten the grub screw and fit the plug to cover the screw hole.

THE MIXER



DIMENSIONS, MM

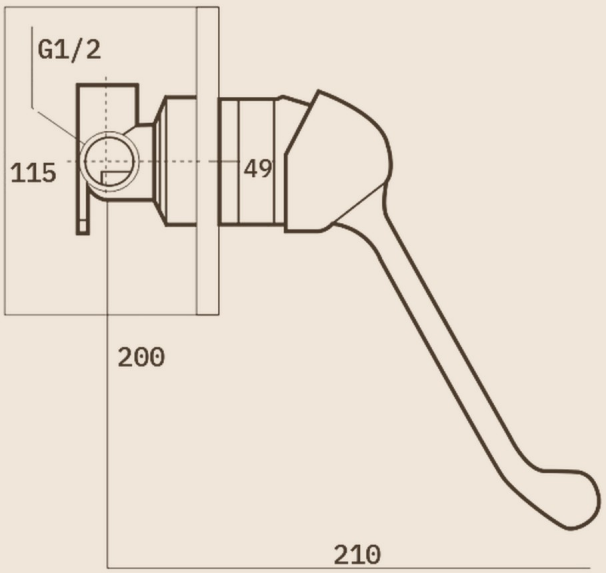

DO NOT REMOVE THE PLASTIC SLEEVE UNTIL INSTALLATION IS COMPLETE

The sleeve protects the decorative finish from damage.

ADDRESS
42 Castro Way, Derrimut VIC 3026

PHONE
(03) 8390 6300

EMAIL
sales@zenmo.com.au

WEBSITE
www.zenmo.com.au

MOBI CARE SHOWER MIXER, WT 509D

Replacing the cartridge.

01	Turn off the hot and cold water supplies at the isolating stop taps.
02	Carefully remove the screw plug, loosen the grub screw and remove the handle. Unscrew the dress ring on the mixer body, taking care not to damage the finish. Remove the lock nut, then lift out the old cartridge.
03	Make sure the inside of the mixer body is clean. Check that the seal is in position in the base of the new cartridge, then fit the new cartridge into the mixer body. The two lugs on the base of the cartridge must fit into the mating holes in the mixer body.
04	Screw on the lock nut and tighten it to a torque of 12Nm. Replace the dress ring and tighten it firmly by hand.
05	Fit the handle back on the mixer body and fit the plug to cover the screw hole.
06	Turn on the isolating stop taps and check the operation of the mixer.

THE MIXER



LOCK NUT TORQUE

12 Nm

Tighten the lock nut to this torque, then replace the dress ring and tighten it firmly by hand.

ADDRESS
42 Castro Way, Derrimut VIC 3026

PHONE
(03) 8390 6300

EMAIL
sales@zenmo.com.au

WEBSITE
www.zenmo.com.au