LAVASSA, SS A504

# Before you install.

## IMPORTANT INFORMATION

01 Before installing, inspect the basin to make sure no damage occurred in transit. If there is damage or a visible defect, do not proceed with installation and advise your supplier immediately.

02 Zenmo or your supplier will not be liable for the cost of installing or removing the basin. The warranty is void if damage occurs during or after installation.


03 A licensed tradesperson should install the basin.

04 Provide suitable reinforcement behind the finished wall for attaching the basin. On timber stud walls, position noggins and studs at a height that suits the fastener locations.

## KEY FIGURES

| 825mm | 2 | 55mm |
|---|---|---|
| Recommended fixing height, approx. | Holes drilled in the wall for fixing screws | Thread left protruding from the finished wall |

## FIXINGS

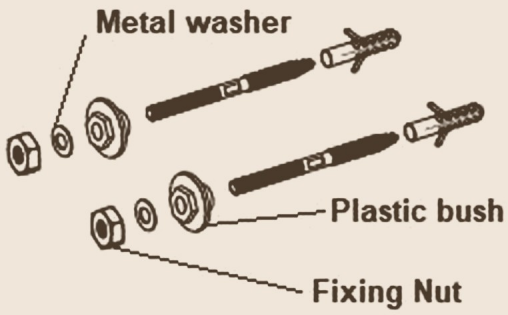


## WEDGE




FAILURE TO FOLLOW THE INSTALLATION INSTRUCTIONS VOIDS THE WARRANTY

ADDRESS
42 Castro Way, Derrimut VIC 3026

PHONE
(03) 8390 6300

EMAIL
sales@zenmo.com.au

WEBSITE
www.zenmo.com.au


LAVASSA, SS A504

# Installing the basin.

## INSTALLATION WITHOUT SHROUD

| | |
|---|---|
| 01 | Mark the fixing screw hole positions on the finished wall at the recommended height, approx. 825mm. |
| 02 | Drill two holes in the wall for the fixing screws. |
| 03 | Insert the fixing screws into the drilled holes. Allow 55mm of thread to protrude from the finished wall. |
| 04 | Locate the basin onto the fixing screws on the wall. Insert the plastic bushes and metal washers, then fasten to the wall with the fixing nuts. |
| 05 | A hard plastic wedge is recommended for levelling adjustment if required. |

FIXINGS

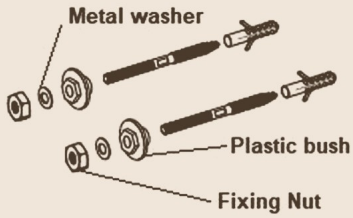


WEDGE




## SHROUD INSTALLATION

| | |
|---|---|
| 01 | Make sure the basin is secured to the bracket and the plumbing is connected. |
| 02 | Position the shroud to the underside of the basin. Mark the fixing screw hole positions on the finished wall. |
| 03 | Drill two holes in the wall for the fixing screws. |
| 04 | Insert the fixing screws into the drilled holes. Allow 55mm of thread to protrude from the finished wall. |
| 05 | Locate the shroud onto the fixing screws on the wall. Insert the plastic bushes and metal washers, then fasten to the wall with the fixing nuts. |

ADDRESS
42 Castro Way, Derrimut VIC 3026

PHONE
(03) 8390 6300

EMAIL
sales@zenmo.com.au

WEBSITE
www.zenmo.com.au