SUPERCARE TOILET SUITE

Before you install.

INSTALLER	Must be installed by a licensed plumber, who supplies an installation certificate that includes their identification.
STANDARDS	Install in accordance with the AS/NZS 3500 series of Standards and any local regulations.
MEASUREMENTS	Take all roughing-in measurements from the finished wall and floor.
CHECK THE SUITE	Check the suite for faults, including cracks, before installing.
SEAT AND COVER	Install the toilet seat and cover after all trades are finished.

S TRAP SET OUT	P TRAP HEIGHT	INLET PROJECTION
255-285mm	180mm	60mm

CARE AND CLEANING

CLEANING	The vitreous china finish can be maintained by wiping over with mild soapy water. After cleaning, rinse with clean water and polish with a clean soft cloth.
DO NOT USE	Abrasive materials such as steel wool or scourers, or any corrosive or abrasive cleaning agents containing acids or scouring agents. These may damage the surface.
BLEACH	Bleach can discolour seats and hinges and should not be used.
METAL HINGES	If the toilet has metal hinges, clean only with a mild liquid domestic cleaner and soft soapsuds, or a steel and chrome cleaner.

FAILURE TO FOLLOW THE INSTALLATION INSTRUCTIONS WILL VOID THE WARRANTY

ADDRESS
42 Castro Way, Derrimut VIC 3026

PHONE
(03) 8390 6300

EMAIL
sales@zenmo.com.au


WEBSITE
www.zenmo.com.au

SUPERCARE TOILET SUITE

Roughing in.


STEP 01 ALL TRAPS

Rough in the position of the water inlet, waste outlet and floor fixing bracket holes. Make sure the inlet connection extends 60mm from the finished wall. Drill holes for the floor fixing brackets, then fix the brackets to the floor.

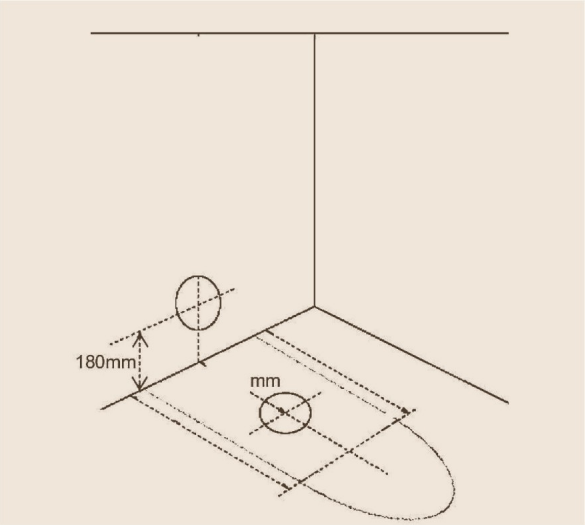


STEP 02 S TRAP

Lubricate the fins of the pan bend and position it into the waste pipe. The knuckle bend must be secured to the wall to avoid leaks.

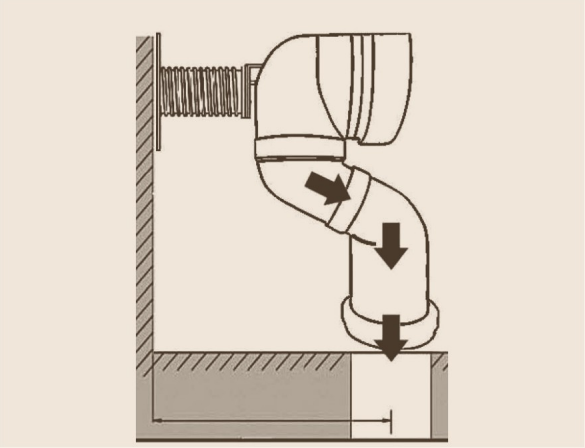

STEP 03 S TRAP

Lubricate the rubber on the exposed connector end.

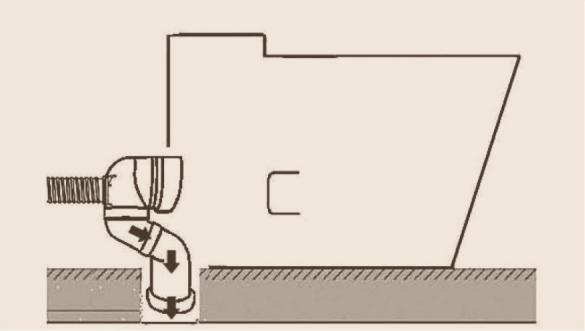

ADDRESS
42 Castro Way, Derrimut VIC 3026

PHONE
(03) 8390 6300

EMAIL
sales@zenmo.com.au


WEBSITE
www.zenmo.com.au

SUPERCARE TOILET SUITE

Fitting the pan.


STEP 04 S TRAP

Align the fully assembled toilet and push it back to the wall. The pan must fit a minimum of 50mm onto the spigot.

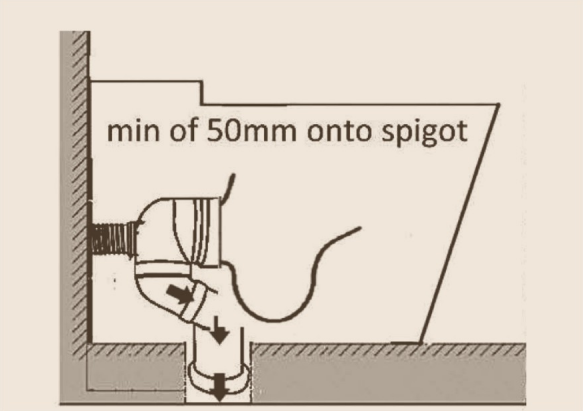


STEP 05 P TRAP

Set up the waste pipe so that the end of the pan collar extends the required distance from the finished wall. The pan collar centre is 180mm above the floor.

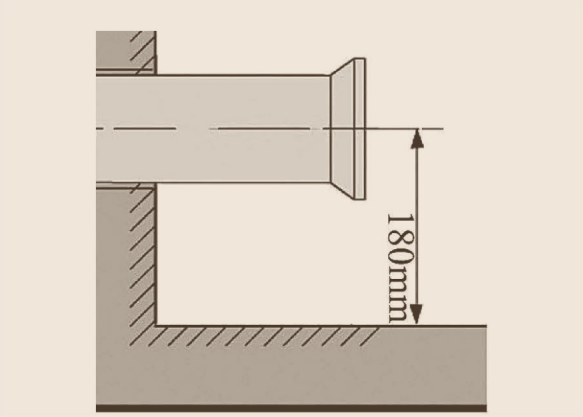

STEP 06 P TRAP

Align the fully assembled toilet and push it back to the wall, connecting the pan spigot to the pan collar. Bucket flush and check for leaks. Because of the design, weight and stability of the toilet, a silicone adhesive only is recommended and accepted by the manufacturer for floor based fixing. Make sure all wet areas are completely sealed.

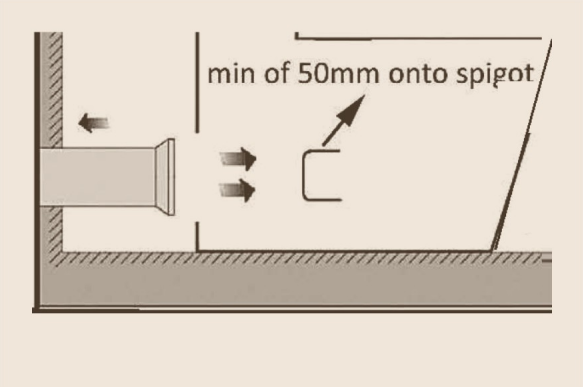

ADDRESS
42 Castro Way, Derrimut VIC 3026

PHONE
(03) 8390 6300

EMAIL
sales@zenmo.com.au

WEBSITE
www.zenmo.com.au

SUPERCARE TOILET SUITE

Fitting the seat.

SEAT FIXINGS



BRACKETS ON THE PAN



01	Separate the black rubbers from the screw.
02	Insert the rubbers into the pan holes. Put the screw with the white bracket on the pan and screw it into the rubber. Do not tighten.
03	Push the seat onto the metal pin on the white bracket, pressing and holding the chrome button inside the seat. Adjust the pin position to make sure the seat is in the right position. Then take the seat off and tighten the screws to secure the brackets.
04	Put the metal cover onto the brackets, then fit the seat.

ADDRESS
42 Castro Way, Derrimut VIC 3026

PHONE
(03) 8390 6300

EMAIL
sales@zenmo.com.au

WEBSITE
www.zenmo.com.au