URBANO, WB 6141, LEFT OR RIGHT HAND, GLOSS WHITE

# Installing the basin.

## IMPORTANT INFORMATION

01 Before installation, inspect the basin to make sure no damage has occurred in transit. If damage has occurred, or a visible defect exists, do not proceed with installation and advise your supplier immediately.

02 ECT Global and your supplier are not liable for the cost of installing or removing the basin. The warranty is voided if damage occurs during or after installation.

03 It is recommended that a licensed tradesperson installs the basin.

04 Suitable reinforcement must be provided behind the finished wall for the attachment of the basin. For timber stud walls, noggins and studs must be positioned at a height that allows for the location of the fasteners.

## INSTALLATION WITHOUT SHROUD

01 Mark the fixing screw hole positions on the finished wall at the recommended height, approx. 825mm.


02 Drill two holes in the wall for the fixing screws.

03 Insert the fixing screws into the drilled holes. Allow 55mm of thread to protrude from the finished wall.

04 Locate the basin onto the fixing screws on the wall. Insert the plastic bushes and metal washers, then fasten to the wall with the fixing nuts.

05 A hard plastic wedge is recommended for levelling adjustment if required.

## FIXINGS

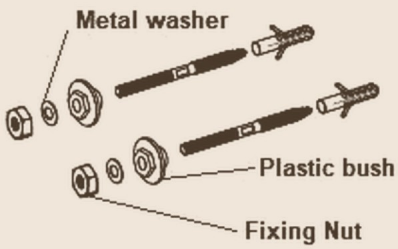


## PLASTIC WEDGE, NOT SUPPLIED



ADDRESS
42 Castro Way, Derrimut VIC 3026

PHONE
(03) 8390 6300

EMAIL
sales@zenmo.com.au

WEBSITE
www.zenmo.com.au

URBANO, WB 6141, LEFT OR RIGHT HAND, GLOSS WHITE

# Installing the shroud.

## SHROUD INSTALLATION

STEP 01

### Secure the basin.

Ensure the basin is secured to the bracket and the plumbing is connected.

STEP 02

### Mark the holes.

Position the shroud to the underside of the basin. Mark the fixing screw hole positions on the finished wall.

STEP 03

### Drill the wall.

Drill two holes in the wall for the fixing screws.

STEP 04

### Fit the screws.


Insert the fixing screws into the drilled holes. Allow 55mm of thread to protrude from the finished wall.

STEP 05

### Fix the shroud.

Locate the shroud onto the fixing screws on the wall. Insert the plastic bushes and metal washers, then fasten to the wall with the fixing nuts.

FIXINGS

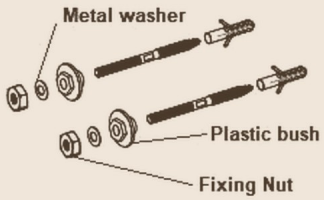


ADDRESS
42 Castro Way, Derrimut VIC 3026

PHONE
(03) 8390 6300

EMAIL
sales@zenmo.com.au

WEBSITE
www.zenmo.com.au