SORRENTO-II, BT 123, BT 123S, GLOSS WHITE


Installing the bath.

THE INSTALLER OR CONSUMER MUST MAKE SURE


- The bath is not damaged before installation.
- The bath has all its components: a bath and a plug waste.
- They are happy with their purchase.
- The floor is level.

STEP 01

Carefully tilt the bath on its side and protect the bath surface. Damage during installation is not covered by warranty. Use a smart waste or flexible connector to connect the waste outlet to the trap, as shown.

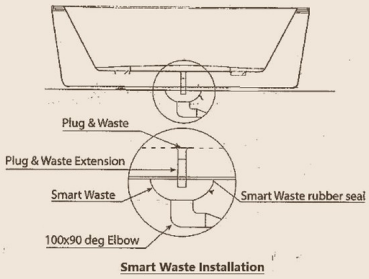


Smart Waste Installation

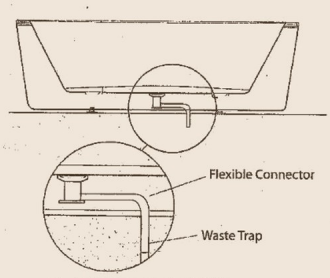

Flexible connector Installation

STEP 02

While the bath is still on its side, apply silicone to the base of the bath as shown. Take extra care not to scratch the bath surface. Apply the silicone around the bath base, leaving a 20mm gap in an inconspicuous position.

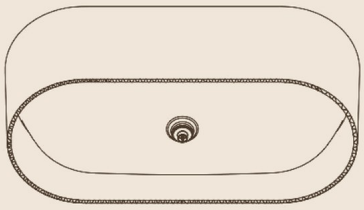
Apply silicone to base of bath as shown



Apply silicone around the bath base surrounding, leaving a 20mm gap in an inconspicuous position.

STEP 03

Tilt the bath back and place it on the floor. Make sure it sits firmly on the floor. Remove any excess silicone from the floor or bath.

ADDRESS
42 Castro Way, Derrimut VIC 3026

PHONE
(03) 8390 6300

EMAIL
sales@zenmo.com.au

WEBSITE
www.zenmo.com.au