
MOBI CARE SHOWER CURTAIN SET

Installation guide.

This guide covers the TP SC1212 and TP SC1615 shower curtain kits. Check the kit against the parts list before you start. Installation by a licensed tradesperson is required to keep the warranty.

ASSEMBLED RAIL

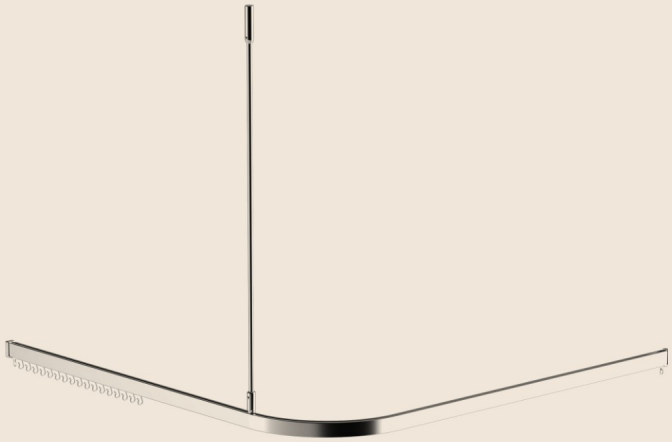

KIT SIZES

TP SC1212

Rail 1200 x 1200mm
Ceiling support 1000mm

TP SC1615

Rail 1600 x 1600mm
Ceiling support 1500mm

PARTS LIST



01
Upper and down hanging rod



02
Screws for hanging rod



03
L-shaped wrench



04
Screw for hanging rod and track connection



05
Runner



06
End cap and mounting bracket



07
Mounting screw and anchor

ALSO IN THE KIT

The rail and the curtain.

ADDRESS
42 Castro Way, Derrimut VIC 3026

PHONE
(03) 8390 6300

EMAIL
sales@zenmo.com.au


WEBSITE
www.zenmo.com.au

MOBI CARE SHOWER CURTAIN SET

Installing the rail.

STEP 01

Assemble the upper and down hanging rod (1) with the screws (2) and the L-shaped wrench (3).

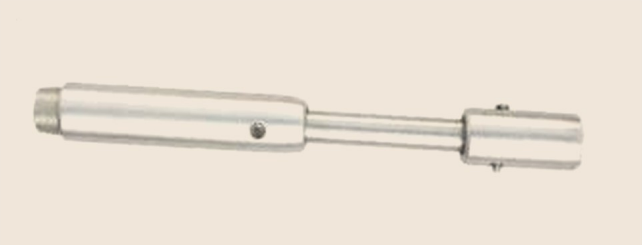

STEP 02

Put the screw (4) in the down hanging rod, then connect the hanging rod to the track with the screw (4).



STEP 03

Put the runner (5) in the track.



STEP 04

Put the end cap (6) in the track and mount it to the wall.



STEP 05

Mount the upper hanging rod to the ceiling with the screw and anchor (7).



KIT SIZES

TP SC1212	Rail 1200 x 1200mm, ceiling support 1000mm
TP SC1615	Rail 1600 x 1600mm, ceiling support 1500mm

ADDRESS
42 Castro Way, Derrimut VIC 3026

PHONE
(03) 8390 6300

EMAIL
sales@zenmo.com.au

WEBSITE
www.zenmo.com.au