MOBI CARE BACK REST, CHROME, TP GRAB6016

Before you install.

AS 1428.1 POSITION REQUIREMENTS

BACKREST HEIGHT	160mm
BACKREST WIDTH	365mm
HEIGHT ABOVE SEAT	Lower edge of the centre of the backrest face 120 to 150mm above the top of the toilet seat
DISTANCE FROM PAN	Lower edge of the centre of the backrest face 430 to 495mm from the front of the pan
BACKREST ANGLE	95° to 100° to the horizontal
LOAD	Withstands 1,100N in any direction
POSITION	Centred on the WC pan centreline
TOILET SEAT	Seat can stay upright when fully raised

Requirements as supplied for AS 1428.1:2021. Confirm against the current standard for your project.

CHROME

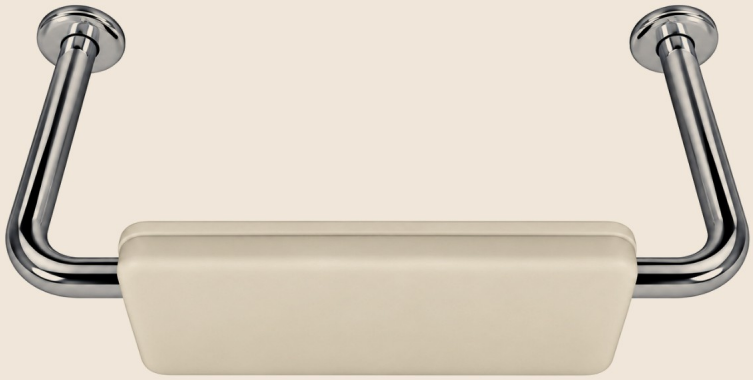

FIXING FLANGES	PROJECTION	BACKREST SIZE
560mm apart	350mm, fixed	160mm high, 365mm wide

ADDRESS
42 Castro Way, Derrimut VIC 3026

PHONE
(03) 8390 6300

EMAIL
sales@zenmo.com.au

WEBSITE
www.zenmo.com.au

MOBI CARE BACK REST, CHROME, TP GRAB6016

Chrome back rest.

CHROME, TP GRAB6016, MM

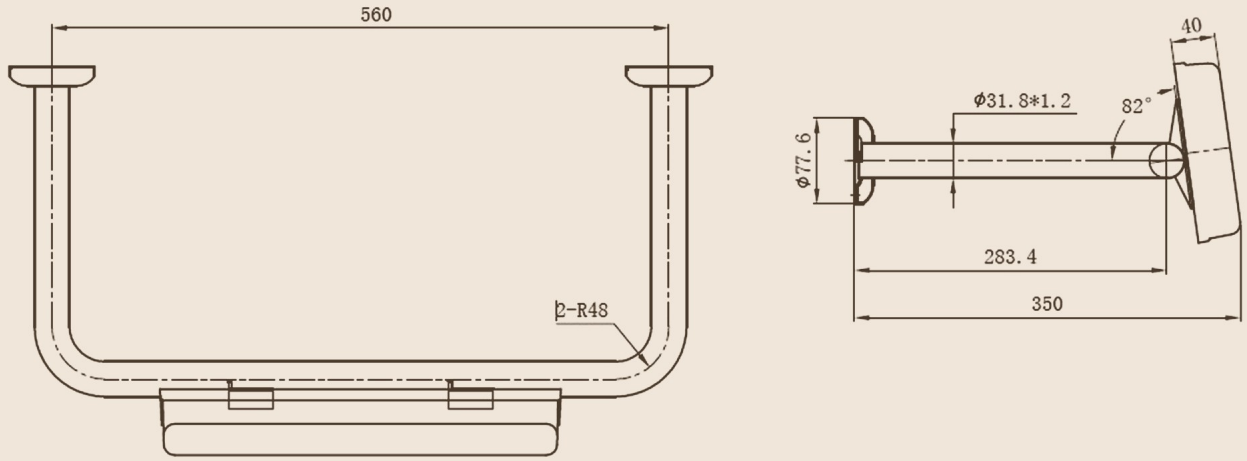

INSTALLATION STEPS

01	Mark the centreline of the WC pan on the wall.
02	Mark the two fixing flange centres 280mm either side of the centreline, 560mm apart.
03	Mark the height of the flange centres. The lower edge of the centre of the backrest face must be 120 to 150mm above the top of the toilet seat. Measure on the back rest from the lower edge of the backrest face to the centre of the fixing flange, and add this to the seat height.
04	Hold the back rest against the wall at the marks and check the lower edge of the centre of the backrest face is 430 to 495mm from the front of the pan. The projection of the chrome back rest is fixed at 350mm.
05	Using a level, mark the three 6.3mm fixing holes in each flange, then drill the holes.
06	Fix both flanges to the wall with fixings suitable for the wall type. The fixings must support 1,100N in any direction.
07	Check the back rest is centred on the pan centreline, firmly fixed, and the toilet seat can stay upright when fully raised.

ADDRESS
42 Castro Way, Derrimut VIC 3026

PHONE
(03) 8390 6300

EMAIL
sales@zenmo.com.au

WEBSITE
www.zenmo.com.au

MOBI CARE BACK REST, MATTE BLACK, TP GRAB6016-MK

Before you install.

AS 1428.1 POSITION REQUIREMENTS

BACKREST HEIGHT	160mm
BACKREST WIDTH	365mm
HEIGHT ABOVE SEAT	Lower edge of the centre of the backrest face 120 to 150mm above the top of the toilet seat
DISTANCE FROM PAN	Lower edge of the centre of the backrest face 430 to 495mm from the front of the pan
BACKREST ANGLE	95° to 100° to the horizontal
LOAD	Withstands 1,100N in any direction
POSITION	Centred on the WC pan centreline
TOILET SEAT	Seat can stay upright when fully raised

Requirements as supplied for AS 1428.1:2021. Confirm against the current standard for your project.

MATTE BLACK

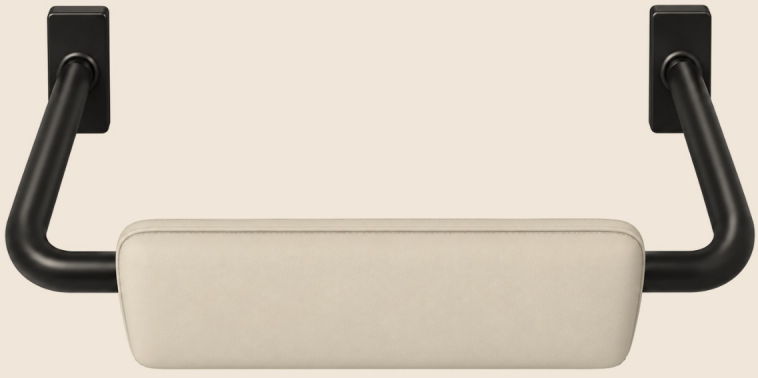

FIXING FLANGES	PROJECTION	BACKREST SIZE	ANGLE
560mm apart	Adjustable from 375 to 442mm	160mm high, 365mm wide	98° as drawn, set during installation

ADDRESS
42 Castro Way, Derrimut VIC 3026

PHONE
(03) 8390 6300

EMAIL
sales@zenmo.com.au

WEBSITE
www.zenmo.com.au

MOBI CARE BACK REST, MATTE BLACK, TP GRAB6016-MK

Matte black back rest.

MATTE BLACK, TP GRAB6016-MK, MM

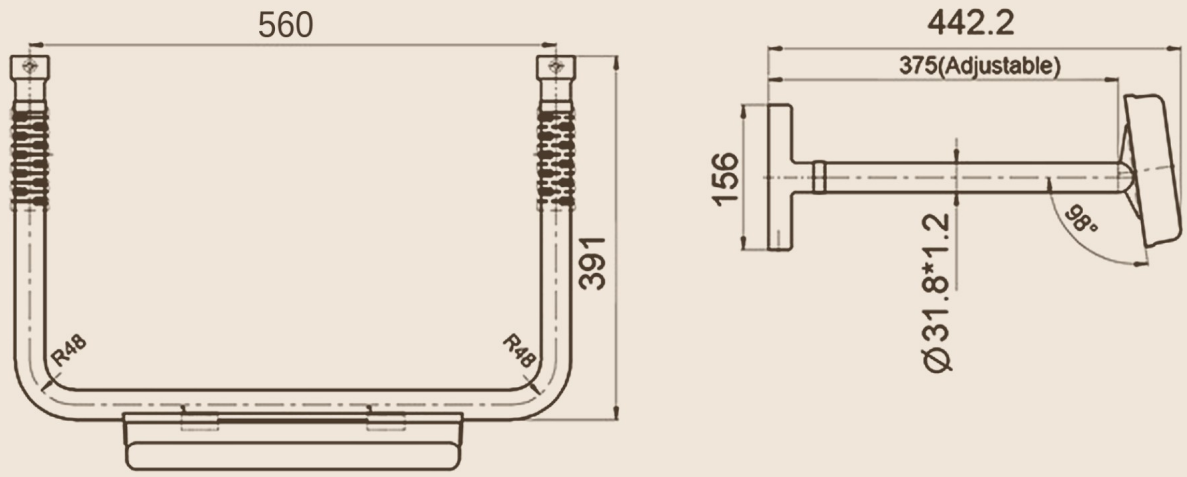

INSTALLATION STEPS WITH ADJUSTMENT

01	Mark the centreline of the WC pan on the wall.
02	Mark the two fixing flange centres 280mm either side of the centreline, 560mm apart.
03	Mark the height of the flange centres. The lower edge of the centre of the backrest face must be 120 to 150mm above the top of the toilet seat. Measure on the back rest from the lower edge of the backrest face to the centre of the fixing flange, and add this to the seat height.
04	Set the projection. The lower edge of the centre of the backrest face must be 430 to 495mm from the front of the pan. Adjust both arms to the same length so the back rest stays square to the wall. The projection adjusts from 375 to 442mm. The installer can cut the metal arms to length to help with this adjustment, for example with a tube cutter, a fine-tooth hacksaw or an angle grinder with a metal cutting disc.
05	Set the backrest angle to 98° as drawn, within 95° to 100° to the horizontal.
06	Mark and drill the fixing holes in each flange. Fix both flanges to the wall with fixings suitable for the wall type. The fixings must support 1,100N in any direction.
07	Check the projection and angle again once fixed. Make any final adjustment, then check every adjustment point is secure.
08	Check the back rest is centred on the pan centreline, firmly fixed, and the toilet seat can stay upright when fully raised.

ADDRESS
42 Castro Way, Derrimut VIC 3026

PHONE
(03) 8390 6300

EMAIL
sales@zenmo.com.au

WEBSITE
www.zenmo.com.au